TremLock[™] Coping



Product Description:

TremLock* Coping is designed with formed aluminum and steel including splice plates and anchor plates. The splice plates are concealed at each joint assuring a watertight seal. The anchor plates are spaced intermittently over nailers on top of the parapet or directly into the wall to provide a positive lock with minimal labor.

Basic Uses:

TremLock Coping is desinged as a parapet wall covering, protecting the top parapet walls and flashing plys from moisture intrusion, while providing for movement from expansion and contraction. It also eliminates exposed fasteners and continuous cleats, which are common with conventional copings.

Limitations:

Because TremLock Coping is a pre-finished material care must be exercised during fabrication and installation to avoid damage to the surface. Use clean gloves when handling matel to avoid fingerprinting. Tools must be clean and properly dressed. Do not drag sheets over surfaces which may scratch or mar finish. The performance of this material in the field depends on the integrity of the film and the adhesion of the underlying coating of zinc. TremLock Coping should not be used in areas of high abrasion or where it is subject to mechanical damage.

Packaging:

Available in 10' (3.05 mm) stock lengths.

Available in Sizes:

• 6" (152 mm) - 32" (812 mm) wall widths.


Pre-fabricated corners, end caps, and additional components are available in single units.

Finish/Color:

Available in: 0.050" (1.3 mm), 0.063" (1.6 mm), .080 (2.03 mm), .125 (3.17 mm) aluminum and 24 ga. (.64 mm) galvanized steel. All aluminum and steel are coated with Kynar 500®/Hylar 5000" fluorocarbon base top coated applied over a quality matched primer, with the same primer on the back side for additional protection. (Refer to color chart for availability and colors).

Installation Procedures:

Corners and end caps must be installed prior to the standard coping lenths. Place factory-welded corners upsideown on a sheet of plastic or other smooth surface to avoid scratching the finish. Position the splice plate in the center of the anchor plate, install splice plate and anchor plate assembly into the top face of the parapet wall at each corner end. For outside/inside miters, use corner supports.

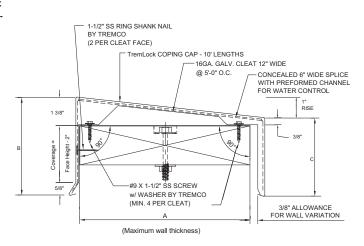

Product Advantages

Factory Fabricated Accessory Items

- A fully engineered coping sytem
- Eliminates field fabrication of accessories
- · Reduces installation costs

No Exposed Fasteners

- · Reduced leak sources
- Accommodates movement

Kynar 500[®]/Hylar 5000[®] Coating

- · Long lasting performance
- · Clean neat appearance
- Variety of colors available

Place the corner assembly into position and secure at the exposed endge of the anchor plate using 4 masonry/wood fasteners min $3/16 \times 1$ in. To attach the unexposed edge of the anchor plate, remove corner and splice plate.

Attatch anchor plate to top of wall at recommended spacing using (4) masonry/wood fasteners min $3/16 \times 1$ in. The front of the anchor plate must be installed tightly against the face of the parapet wall. Approx (1) every 5' (1.52 mm). Typical anchor plate spacing for walls less than 16" (.406 mm) wide is 60" (1.52 mm) O.C. For walls 17" (.433 mm) or greater, anchor plates to be spaced at 40" O.C. (1.02 mm). Center splice plates on anchor plate at all coping joints.

TremLock[™] Coping

Physical Performance Characteristics Coated Aluminum Coated Steel Property Typical Value Typical Value Test Method Dry Film 0.20 Mill Primer 0.20 Mill Primer ASTM D 1400 Thickness 0.80 Mill Topcoat 0.80 Mill Topcoate нв-н нв-н Pencil ASTM D 3363 Hardness Flexibility: No Cracking No Cracking ASTM D 522 Mandrel ASTM D 822 Color Passes 5000 Hrs. Retention Max 5 units ASTM D 2244 Change 8 Max chalk = Max Chalk = ASTM D 4214 Chalk Resis-Rating of 8 Rating of 8 tance Film <0.01 mils/year <0.01 mils/year Average mill Erosion eroded/year Rate:


Fully engage hook on face of coping with front leg of anchor plates. Pivot coping into position and press down firmly over each anchor plate until hook on rear leg locks into place. (Refer to installation guidelines for detailed instructions).

Availability and Cost:

Contact your local Tremco Representative for pricing and availability. For the name and number of your Representative, call the Roofing Division at 216/292-5000

Maintenance:

Your local Tremco Roofing Representative can provide you with effective maintenance procedures which may vary, depending upon specific conditions. Periodic inspections, early repairs and preventive maintenance are all part of a sound roof program.

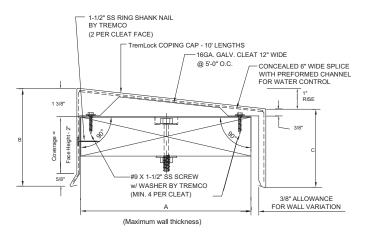

Guarantee/Warranty:

Tremco Inc. warrants TremLock™ Coping to be free of defects and to meet published physical properties when tested according to ASTM and Tremco standards. Under this warranty, any TremLock Coping product that is proved to be defective when applied in accordance to our written instructions, and in applications recommended by Tremco as suitable for this product will be replaced with like product at no charge. THIS IS BUYERS SOLE AND EXCLUSIVE REME-DY. All claims concerning product defects must be made in writing within twelve (12) months of shipment. The absence of such claims in writing during this period will constitute a waiver of all claims with respect to such product. This warranty shall be IN LIEU OF any other warranty, express or implied, including but not limited to, any implied warranty of MER-CHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.





3735 Green Road, Beachwood, Ohio 44122 1.800.562.2728 • www.tremcoroofing.com

6694 Revised 05-07